Century Components

Cutting Board Pullout Installation Instructions

Models CBP14-34PF & CBP16-34PF

To be installed in drawer opening above 34 qt waste unit.

- Install Cutting Board Pullout, following concept of a typical drawer installation, by attaching the included Blum slides to both sides of the cabinet. "Locking units" and synchronization rod are preassembled. See illustration on reverse side, upper right.
- 2) Fasten "latches" in the appropriate holes in the upper front of the slides. Illustration on reverse, lower right.
- 3) Attach drawer front.

Models CBP14-50PF & CBP16-50PF

To be installed above 50 qt waste unit, in the same door opening.

- Install Cutting Board Pullout, following concept of a typical drawer installation, by attaching the included Blum slides to both sides of the cabinet. "Locking units" and synchronization rod are preassembled. See illustration on reverse side, upper right.
- 2) Fasten "latches" in the appropriate holes in the upper front of the slides. Illustration on reverse, lower right.

Important Note To Consumers: To ensure the longevity of your new cutting board, a "butcher block conditioner" or "cutting board oil" needs to be applied on a monthly basis. This will stabilize the wood fibers and is especially critical the first year.

TANDEM plus BLUMOTION & MOVENTO

Ablum

Application




Description

- For TANDEM 563 H/., 569H/., and all MOVENTO runners
- Can be combined with TIP-ON BLUMOTION
- Two-sided locking for secure hold

Pull-Out Shelf Lock

- Can be released with one hand from either side of the shelf
- Easy installation with self-aligning components
- No change to runner installation
- Can be easily integrated into the existing manufacturing processes
- Designed for use in frameless or blocked-out face frame applications only at this time

Basic components

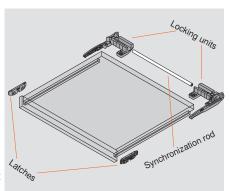

Components



