


----- **INSTALLATION INSTRUCTIONS** -----

**FOR MODEL B2C (PIECUT) AND MODEL B2 (FULL ROUND) Revolving Shelf Hardware**

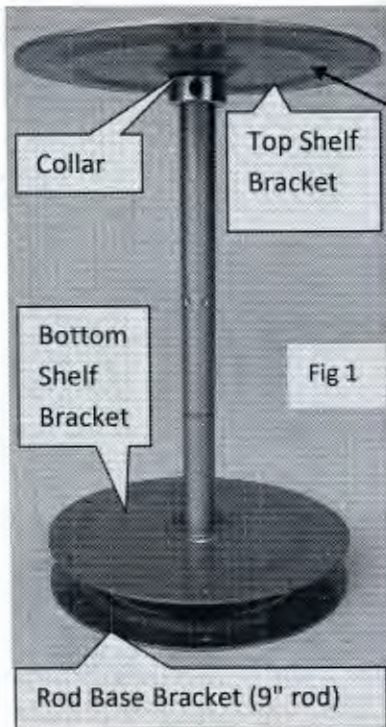


Inside box; locate pack of 18 screws, 1 bearing, 2 washers, and grease syringe. (Model B2C already has the bearing and washers installed.)

**1** Loosen **Collar** set screw with 5/32" Hex Wrench. Slide **Top Shelf Bracket** and **Collar** off the top of **Bottom Shelf Bracket**.

**2** Slide the **Bottom Shelf Bracket** off the top of the **Rod Base Bracket**.

**3** Position **Rod Base Bracket** (9" rod) and screw to floor of cabinet using six #8 X 3/4 Pan hd screws provided. (**Ball Stop** centered with the door on pie-cut, B2C Model)

**4** (Model B2 only) slide one washer, then bearing, and then second washer over **Rod Base Bracket**.

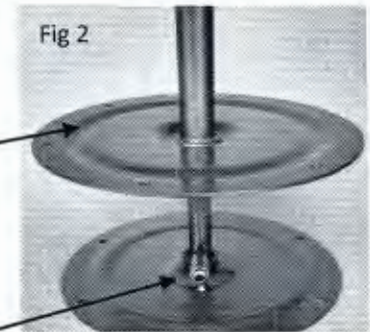


**5** Grease full length of **Rod Base Bracket** rod with provided syringe. (See Fig 4)

**6** Cut 1-1/16" hole in center of bottom shelf only, do not cut hole in top shelf! (Shelves not Included)

**7** Fasten bottom shelf to **Bottom Shelf Bracket** using #8 X 5/8 flat hd screws provided. (Center pie-cut with catch where applicable.) Then slide assembled shelf and **Bottom Shelf Bracket** over **Rod Base Bracket**.

**8** Fasten top shelf to the **Top Shelf Bracket** with six remaining screws (Align top and bottom pie-cut shelves on B2C model.) and tighten **Collar** set screw (See fig 1) .

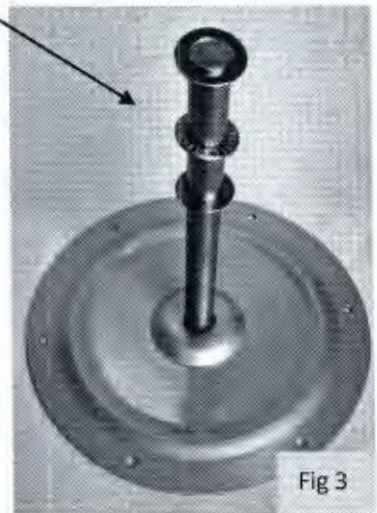

**INSTALLATION PROBLEMS? Call (574) 858 - 9443 or 453-0144**

**Manufactured By I D Miller & Sons LLC Bourbon, IN USA**